ASKO



INSTRUCTIONS FOR USE

FREEZER

EN

RFF586KNCS1

RFF586KNCB1

Contents

Introduction 3
Welcome to our growing ASKO family! 3
Important notes and precautions 4
Before using the appliance for the first time 4
Important safety instructions 4
Important information on the use of appliance 6
Installation and connection 8
Selecting the room 8
Appliance placement 8
Connecting the appliance 11
Before using the appliance for the first time 12
Before you use the appliance for the first time 12
Energy-saving advice 12
Reversing the door opening direction 13
Description of the appliance 17
Drawers 18
Operating the appliance 19
Control panel 19
Initial use 20
Temperature setting 21
Menu 22
Alarms 26
Storing and freezing food 28
Avoid contamination of food 28
Freezing and storing foods in the freezer 28
Thawing frozen food 29
Maintenance 30
Defrosting the appliance 30
Cleaning the appliance 30
Faults 31
Faults table 31
Service 34
Right to Repair 35
Spare parts 36
Compliance information 37
Environmental aspects 38
Disposal of packaging and appliance 38

Welcome to our growing ASKO family!

We are proud of our appliances. We hope that this appliance will be an appreciated and dependable aid for many years to come.

Please read the operating instructions before use. They include general tips, information about the settings and adjustments you can make, and the best way to take care of your appliance.

⚠ WARNING!

Read the safety instructions before using the appliance!

Read these instructions thoroughly before you first use the appliance, and keep the instructions for future use.

Link to the EU EPREL database

Information about your product can be found at www.asko.com/energylabel, where you will also find a link to the European Product Database for Energy Labelling, EPREL. Or else visit https://eprel.ec.europa.eu directly. Follow the instructions to search by model name (see the information on the serial number plate).

The following symbols are used throughout the manual and they have the following meanings:

INFORMATION!

Information, advice, tip, or recommendation

⚠ WARNING!

Warning – general danger

DANGER OF FIRE!

Warning; risk of fire / flammable materials

Before using the appliance for the first time

Before connecting the appliance to the power mains, please read carefully the instructions for use which describe the appliance and its correct and safe use. The instructions apply to several appliance types/models; thus, settings or equipment may be described herein which is not available in your appliance. We recommend saving this instruction manual for future reference and attach it to the appliance if it is sold in the future.

Check for any damage or irregularities on your appliance. If you find your appliance is damaged, notify the retailer from which you have purchased the appliance.

Allow the appliance to stand upright for at least 4 hours before you connect the appliance to the mains. This reduces the risk of malfunctions resulting from transport effects on the refrigerant unit.

Important safety instructions

⚠ DANGER OF FIRE!

WARNING! Risk of fire/flammable materials.

The appliance must be connected to the power mains and grounded in compliance with the effective standards and regulations.

WARNING! Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Before cleaning the appliance, unplug it from the power mains (unplug the power cord from the wall outlet).

⚠ ELECTRIC SHOCK!

WARNING! If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

⚠ ELECTRIC SHOCK!

WARNING! When positioning the appliance, ensure the supply cord is not trapped or damaged.

⚠ ELECTRIC SHOCK!

If LED lighting does not work, call a service technician. Do not attempt a repair of the LED lighting yourself, as there is danger of contact with high voltage!

⚠ WARNING!

WARNING! Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

⚠ WARNING!

WARNING! Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

⚠ WARNING!

WARNING! To avoid any hazard resulting from poor stability of the appliance, make sure it is installed as instructed.

Freeze burn hazard

To avoid freeze burn, never put frozen food in your mouth and do not touch frozen food.

Safety of children and vulnerable persons

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Remove the packaging intended to protect the appliance or particular parts during transport and keep it outside the reach of children. It presents danger of injury or suffocation.

When removing a used appliance, disconnect the power cord, remove the door, and leave the shelves in the appliance. This will prevent children from locking themselves in the appliance.

For European markets only

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

Warning regarding the refrigerant

The appliance contains a small amount of an environmentally friendly yet flammable gas R600a. Make sure that no parts of the cooling system are damaged. A gas leak is not hazardous to the environment, but it could cause eye injury or fire.

In case of a gas leak, ventilate the room thoroughly, disconnect the appliance from the power mains, and call a service technician.

Important information on the use of appliance

WARNING! This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;

- catering and similar non-retail applications.

⚠ WARNING!

WARNING! Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

The appliance may not be used outdoors and it may not be exposed to rain.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

If the appliance will be out of use for an extended period of time, switch it off using the relevant button, and unplug it from the power mains. Empty the appliance, defrost it, clean it, and leave the door ajar.

In case of an error or power supply failure, do not open the freezer compartment unless the freezer has not operated for over 16 hours. After this period, use the frozen food or provide sufficient cooling (e.g. a replacement appliance).

Technical information on the appliance

Rating plate can be found in the appliance interior. It indicates data on voltage, gross and net volume, type and amount of refrigerant, and information on the climate classes.

If the language on the rating plate is not the language of your choice or the language of your country, replace it with the one supplied.

⚠ WARNING!

WARNING! Do not damage the refrigerant circuit.

Selecting the room

- Install the appliance in a dry and well ventilated room. The appliance will operate correctly if the environment temperature is in the interval specified in the table. The appliance class is indicated on the rating plate / label with the basic information on the appliance.

Note: Place the appliance in a sufficiently large room. There should be at least 1 m^3 of space per 8 grams of refrigerant. Amount of refrigerant is indicated on the rating plate in the appliance interior.

Description	Class	Ambient temperature range °C	Relative humidity
Extended temperate	SN	+10 to +32	≤75%
Temperate	N	+16 to +32	
Subtropical	ST	+16 to +38	
Tropical	T	+16 to +43	

INFORMATION!

This appliance is not intended to be used as a build-in appliance.

INFORMATION!

Do not place an appliance in a room where temperature can drop to below 5 °C as this may cause abnormal appliance operation or failure!


- After the installation, the appliance mains plug should be accessible!
- Do not place the appliance near appliances or devices radiating heat, such as a cooker, a stove, a radiator, water heater etc., and do not expose it to direct sunlight. The appliance should stand at least 3 cm away from an electric or gas cooker or at least 30 cm away from an oil or solid fuel stove. If the distance between such source of heat and the appliance is smaller, use an insulating panel.


Appliance placement


Appliance installation should be carried out by at least two persons to avoid any personal injury or damage to the appliance.

- The appliance must stand level or tilted slightly to the back. It should be stable and placed a solid base. At the front, the appliance is fitted with two adjustable feet that can be used to level the appliance. At the rear side, casters allow for easier installation of the appliance (only with some models).
- Do not expose the appliance to direct sunlight and do not place it near sources of heat. If this cannot be avoided, install an insulation panel.

- The appliance is intended for free-standing installation. To achieve optimum power consumption, always provide 50 mm of clearance between the wall and the back of the appliance and above the appliance. Also ensure sufficient air circulation next to and above the appliance.
- The appliance can also be placed adjacent to or between furniture cabinets, or adjacent to a wall. In case of such placement, the appliance will operate flawlessly, however, noise and power consumption may increase.
- Take into account the space or clearance required to open the appliance door, in order to allow the drawers and shelves to be pulled out or removed (see installation diagram).

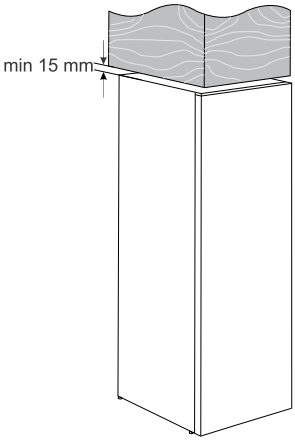

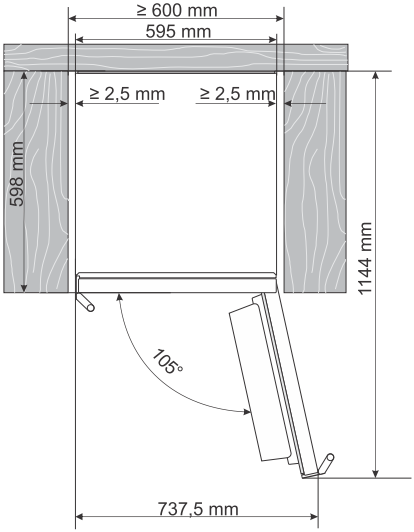

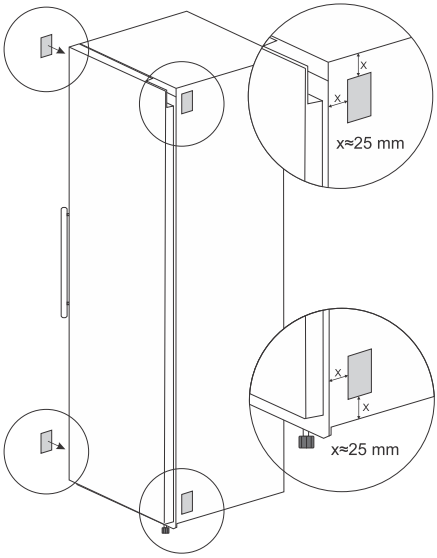


The appliance can be installed in a cabinet with an internal width of at least 600 mm.

Before placing the appliance in the cabinet, it must be fitted with spacers that allow the door to be opened correctly. Spacers are included in the bag with instructions. Remove the protective film from them and stick them on each side of the appliance, as shown in the figure.


Once the spacers are fitted, slide the appliance into the cabinet. Be careful not to damage the power cord.

When the appliance is installed in the cabinet, align it with the help of adjustable feet.

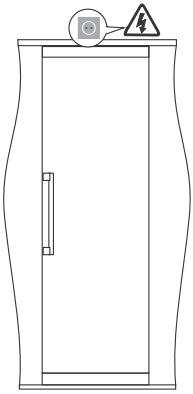

- For a complete installation, the route of the power cord must also be implemented so that it does not interfere with operation and is not a nuisance.


Once the appliance is aligned, install the bottom cover.

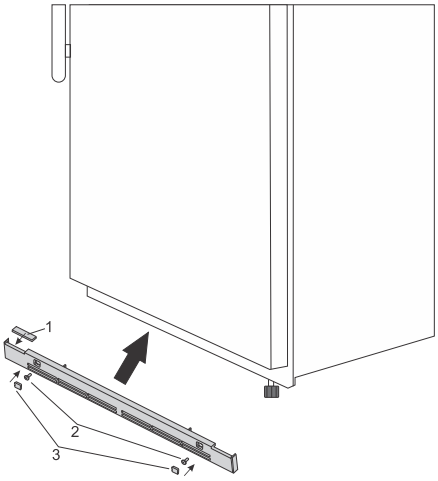

First, place the insert (1) on the bottom cover, on the side where there is no door hinge. Then place the bottom cover on the appliance and tighten it with the two screws (2). When the cover is properly installed, place the cover caps (3) in the screw holes, with the groove facing the centre of the appliance.

To reverse the direction of door opening, the bottom cover must be removed in reverse order. Carefully remove the cover caps using a 4 mm wide flat-blade screwdriver. Insert the screwdriver tip into the groove on the cap and remove it carefully. Then unscrew the two screws (2) and remove the bottom cover from the appliance. Move the insert (1) to the opposite side and reinstall the cover on the appliance following the same procedure.

Installation of the anti-tip bracket

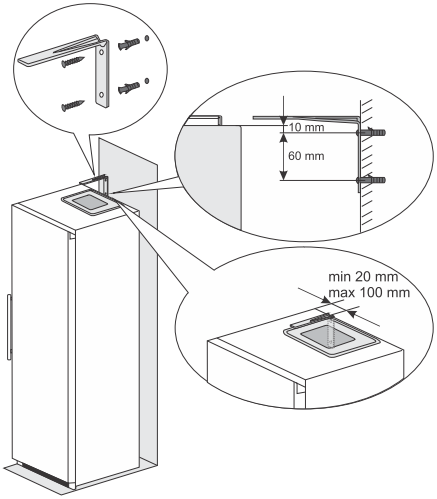

As the appliance can tilt forwards when opened with the door fully loaded, it must be secured with an anti-tip bracket (for cabinet-mounted or freestanding installation).

Drill two Ø 6 mm holes in the wall behind the appliance, at a distance of between 20 mm and 100 mm from either side of the appliance.

The first hole should be 10 mm below the upper edge of the appliance and the second one 60 mm lower.


Insert the wall inserts into the holes and fix the bracket with the screws provided, as shown in the figure.

Then push the appliance against the wall so that the bracket extends above its upper edge.

INFORMATION!

The supplied bracket fixing material is designed for fixing in concrete and brick walls. For fixing in other types of walls, use other suitable fixing material or consult a specialist.

Connecting the appliance

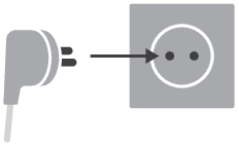

- Connect the appliance to the power mains using the power cord. The wall outlet should be fitted with a ground contact (safety socket). Nominal voltage and frequency are indicated on the rating plate/label with basic information on the appliance.
- The appliance must be connected to the power mains and grounded in compliance with the effective standards and regulations. The appliance will withstand short-term deviations from the nominal voltage, but not more than +/- 6%.

Before you use the appliance for the first time

Do not connect the appliance to the mains until you have carefully read the instructions for the correct and safe use of the appliance. As these instructions are for various types and models, it is possible that the instructions for use refer to settings or parts that are not available on your appliance. We recommend that you keep these instructions for future use. If you sell the appliance, enclose them with the appliance.

Inspect the appliance for damage and/or irregularities. If the appliance is damaged, contact the store that sold you the appliance.

Allow the appliance to stand upright for at least 4 hours before you connect the appliance to the mains. This reduces the risk of malfunctions resulting from transport effects on the refrigerant unit.

Before using the appliance for the first time, the interior and all internal accessories should be cleaned with lukewarm water and a neutral cleaning agent. Wipe the cleaned parts with a cloth with clean water and then dry them thoroughly.


If you use the appliance for the first time, do not put food into the appliance until the temperature has decreased to the set temperature.

Energy-saving advice

- Install the appliance as stated in the instructions for use.
- Do not open the door more than necessary.
- Never cover or obstruct the ventilation openings.
- Replace a door seal that is damaged or no longer seals properly as quickly as possible.
- Store food in well-sealed containers or suitable packaging.
- Allow food to cool to room temperature before you put it in the appliance.
- Defrost food in the refrigerator compartment.
- The lower the set temperature, the higher the power consumption.


The direction in which the appliance door opens can be reversed.

Note: Disconnect the appliance from the power mains before reversing the door opening direction.


Tools required:	
	Socket wrench No. 6,
	Cross-point screwdriver
	Flat screwdriver
	Spanner No.10
	Torx T25

Note:


- If the appliance has to be tilted to allow access to parts on the bottom, ask another person for assistance or gently place the appliance on some soft padding to prevent damaging it. To reverse the opening direction, proceed as follows.

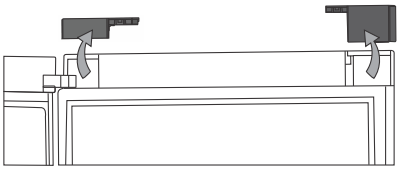1. 

Remove the covers on each side of the upper door.

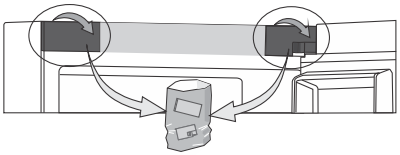
2. 

Then remove the covers on each side of the control unit. To do this, hold it up and pull it hard towards you. Put the covers away for future reference.

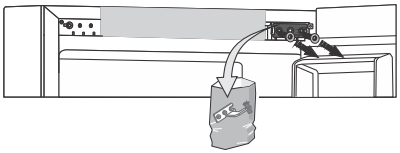
3. 

Then unscrew the top hinge and also put it away for future reference.

Reversing the door opening direction

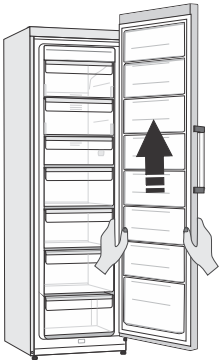
4. 

Remove the door from the bottom hinge by carefully lifting it straight up while it is open at a 90° angle. Place the door on a smooth surface.

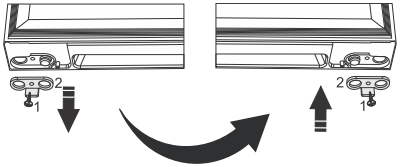
5. 

Changing the soft closing mechanism: unscrew the screw (1), remove the door stopper (2), and install both components on the opposite side of the door.

6. Unscrew the foot (1) and the two screws (2) with which the lower hinge (3) is attached. Remove the hinge (3) and keep it for possible future use. Take the hinge (4) from the documentation bag and screw it onto the opposite side. Finally, reattach the foot (1).

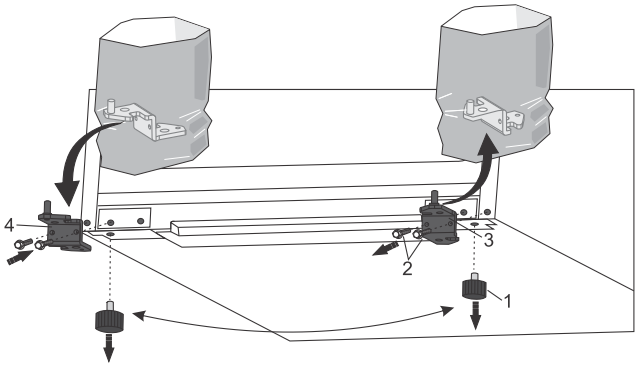


7.

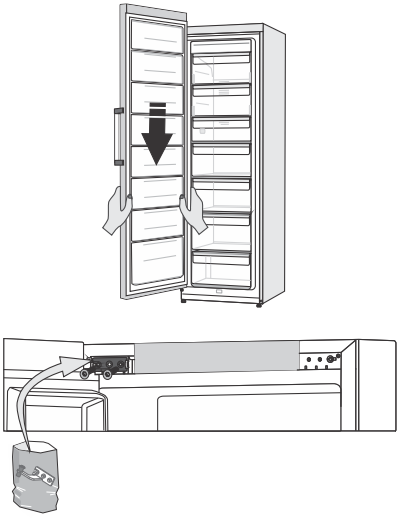

With the door opened at a 90° angle, place it onto the bottom hinge, then fasten the upper hinge, taken from the documentation bag, with screws. Hold the door in place during installation.


8.

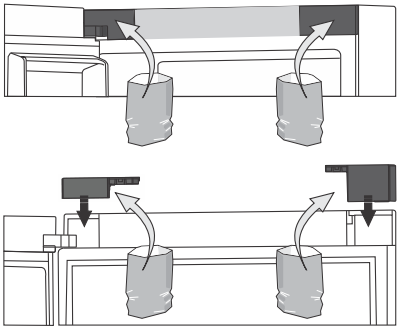

Install the the covers on each side of the control unit first, and then upper door covers, which you can find in the bag with documentation.

Reversing the door opening direction

9.

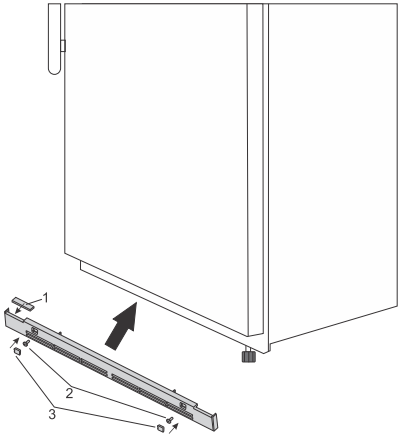



Once the appliance is aligned, install the bottom cover.

First, place the insert (1) on the bottom cover, on the side where there is no door hinge. Then place the bottom cover on the appliance and tighten it with the two screws (2). When the cover is properly installed, place the cover caps (3) in the screw holes, with the groove facing the centre of the appliance.

Note: If your model has a handle, then move it to the opposite side by following the instructions below.

Remove the caps (1) and undo the two screws (2) as shown in the figure. Rotate the handle (3) by 180° and replace it on the opposite side. Then, fasten the screws (2) and replace the caps (1).

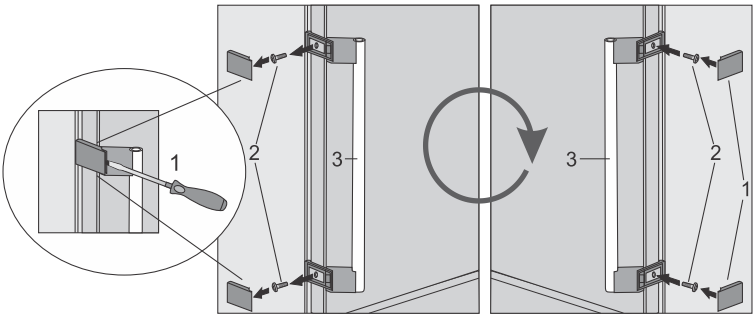

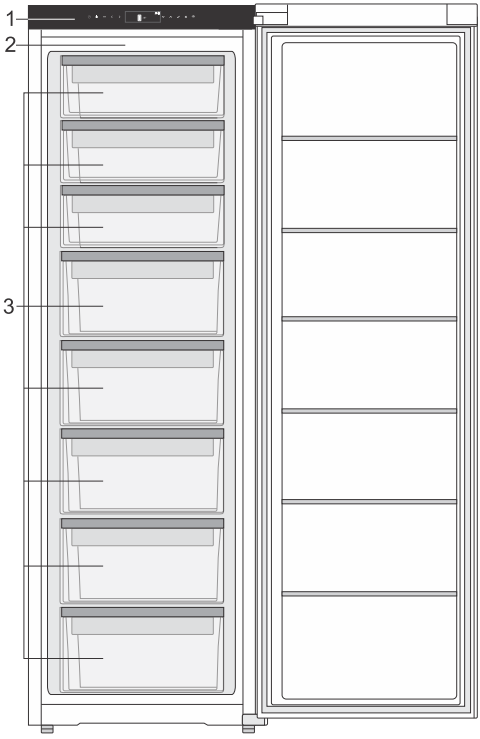

1. Control panel
2. NoFrost freezer unit
3. Freezer drawers


NoFrost

With the NoFrost system, you no longer need to defrost the freezer.

Door closure (Soft Close)


The door closes itself once the opening angle is less than 20°. The soft-close door mechanism closes the door gently.

Drawers

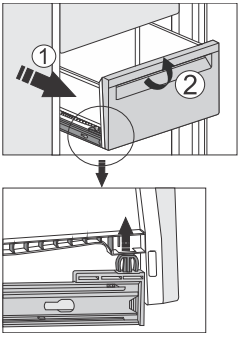


Many drawers are mounted on telescopic movable guides.

To pull the drawer out of the guides, pull it out completely. Lift the drawer at the front to remove it from the latch and then pull it out completely.

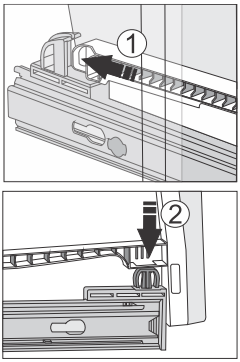

To insert the drawer into the guides, pull both guides out fully. Align the drawer with the guides and push it into the groove on the back of the guide. Then slide the drawer down at the front to latch it onto the telescopic guide.

Control panel

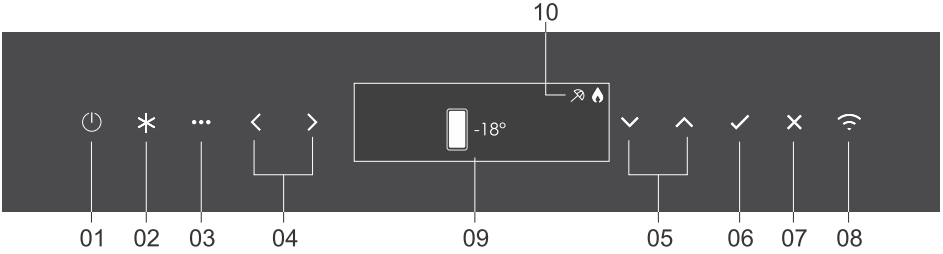

01	On/Off key: • A long press to switch the appliance on or off.
02	Intensive freezing (Fast Freeze) on/off key: • Use button 02 to turn intensive freezing on or off.
03	Button for opening the MENU: • Press briefly to enter/exit the MENU.
04	Menu left/right key: • To navigate menus. • To activate/deactivate settings with the switch .
05	Up/down key: • To increase or decrease the set temperature. • To increase or decrease the values. • To navigate through vertical oriented menus. • To scroll text.
06	Confirmation key ✓ : • For confirming settings in the MENU. • To activate or turn on the function. • To answer 'Yes' to a pop-up.
07	X key: • To close or cancel a menu or function. • To return to previous screen. • To cancel or stop alarms. • To remove or close the pop-up.

Table continued from last page


08	Wi-Fi key: • Press and hold (2 seconds) – shortcut to enter the connectivity menu and Wi-Fi functions. • Install the **ConnectLife** application and create an account. • The application then guides you through the entire process of connecting the appliance to your smartphone.
09	Display
10	Display of the active special function  .

INFORMATION!

For the best response, press the keys with the main part of your fingertip  .

Whenever you press the key, a short tone will sound. Volume of the key sound can be set in SETTINGS MENU.

Toggle:

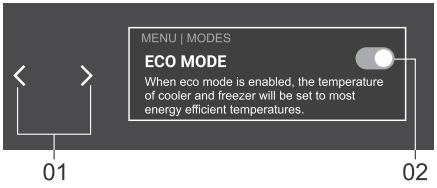

By pressing on 'Menu left/right' key (01), you can (de)activate toggle switch (02) to (de)activate a setting.

An orange background means that the function is activated, and a grey background means that it is deactivated.

function turned off

function turned on

In some cases, when activating or deactivating the switch, the confirmation key is also activated ✓ and needs to be pressed to confirm your selection.

Initial use


INFORMATION!

When the appliance is plugged in for the first time or after the appliance was disconnected from the mains for a longer period of time it is mandatory to wait four hours until the appliance can be activated.

The default state of the appliance is **switched off**. When the appliance is connected to the power mains, it is still switched off.

You switch on the appliance by pressing the on on/off key . The appliance will start cooling with the setpoint temperature.


Setting the language

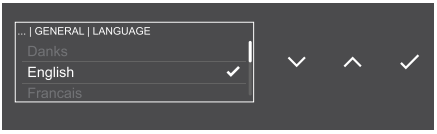

Set the desired language in which the appliance's display texts will appear. The default setting is 'English'.

Press ... , use the left/right arrows to select SETTINGS and then GENERAL. Use the up/down arrows to select Language, and then use the up/down arrows again to select the appropriate language, which you then check with a check mark.

Temperature unit

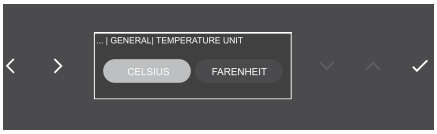


Select the temperature unit (°C/°F) to control and monitor your appliance.

Press ... , use the left/right arrows to select SETTINGS and then GENERAL. Use the up/down arrows to select TEMPERATURE UNIT, and then use the left/right arrows to select the desired unit, which you then check with a check mark.

Temperature setting

INFORMATION!

- The factory default setting is the recommended temperature of -18 °C.
- After the appliance is switched on, it may take several hours for the set temperature to be reached. Do not place any food into the refrigerator before the temperature drops to the selected setting.

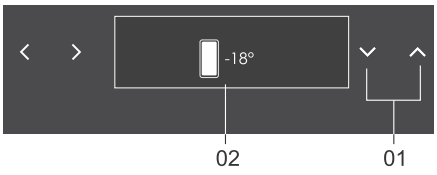


Temperature can be set by pressing **01** to set the desired temperature. Temperature can be set in the range from -15 °C to - 26°C. The recommended temperature setting is -18 °C.

Increase temperature

Decrease temperature

Intensive freezing (Fast Freeze)

- Use this setting after switching on the appliance for the first time, before cleaning, or before inserting a large amount of food.

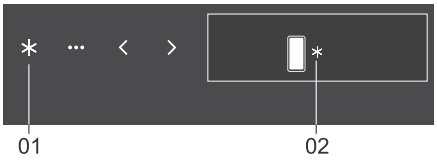

Switching it on: to activate the Fast Freeze function, press and hold **01**.

Switching it off: to deactivate the Fast Freeze function, press and hold **01**.

If the setting is not deactivated manually, it will be deactivated automatically (after about 52. hours). The setting returns to the last saved state.

INFORMATION!

- When the intensive freezing (fast freeze) function is activated, the appliance will operate with maximum power. During this time, operation may be temporarily somewhat louder.

Menu

Because the appliance has extensive setting options, a menu system was defined to provide access to all settings. As a default all settings are already set, so it is not necessary to go through SETTINGS MENU. But to adapt the appliance settings to your preferences it is possible to do so.

You can enter the MENU by briefly pressing ••• .


Use the left/right arrows to navigate through the four main menus

- SPECIAL MODES (SPECIAL MODES)
- KEY LOCK (KEY LOCK)
- SETTINGS (SETTINGS)

which also contain submenus, which are described in each chapter separately. When you reach the desired menu, press the check mark to enter the options of the selected menu.

SPECIAL MODES (SPECIAL MODES)

Within the SPECIAL MODES menu, you can find four special modes that you can activate or deactivate using the toggle.

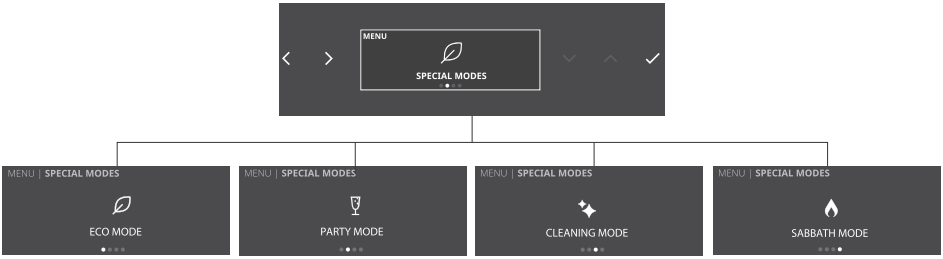


ECO MODE (ECO MODE) or economical/environmentally friendly mode

When the ECO function is selected, the appliance works with the optimum settings (freezer -18 °C). These settings are shown in the display. The ECO function has no time limit and remains activated until the function is disabled.

Switching it on/off: use the left/right arrows to navigate to the SPECIAL MODES menu and press the check mark to enter the menu. Then use the left/right arrows to navigate to ECO MODE, where you then use the left/right arrows to turn the ECO function on or off again.



ECO MODE (ECO MODE) on



ECO MODE (ECO MODE) off


The ECO mode is automatically deactivated even when you change the temperature and when another function with a higher priority is selected.

PARTY MODE (PARTY MODE)

In Party mode, set all compartments to maximum cooling and freezing. Use this function when you want to cool/freeze large amounts of food and drink during the day.



PARTY MODE (PARTY MODE) on



PARTY MODE (PARTY MODE) off


If the function is not deactivated manually, it will be deactivated automatically after 24 hours.

CLEANING MODE (CLEANING MODE)


This function is used when cleaning the appliance, when the door is open for a long time. The function is time-limited to one hour.

⚠ WARNING!

When using water, switch off the appliance and remove the plug.



CLEANING MODE (CLEANING MODE) on




CLEANING MODE (CLEANING MODE) off


The CLEANING MODE is automatically deactivated even when you change the temperature of one of the compartments and when another function with a higher priority is selected.

SABBATH MODE (SABBATH MODE)

Sabbath mode is active for 72 hours after activation. All illuminated features and the display will be temporarily disabled. In the meantime, the appliance's cooling system is working normally.



SABBATH MODE (SABBATH MODE) on/activated




SABBATH MODE (SABBATH MODE) off/deactivated

You can also turn off SABBATH MODE manually by long-pressing ••• .


SABBATH MODE is automatically deactivated after 72 hours.

If any error occurs during Sabbath mode, it won't be showed until Sabbath mode is deactivated.

KEY LOCK (KEY LOCK)




When the appliance keys are locked, it is not possible to switch off the appliance or to change any setting. In the meantime, the appliance's cooling system is working normally. Settings can only be changed in the mobile app.



Keys can be locked in the KEY LOCK menu. When you activate the KEY LOCK function with the toggle, you lock all keys except the X key.

You can unlock the keys by long pressing (3 seconds) the X key.

SETTINGS (SETTINGS)

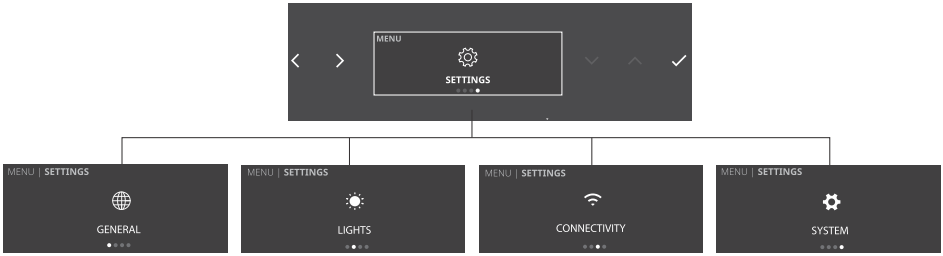

GENERAL (GENERAL)

You can set the following from this menu:

- Language (Language) (language of the touch screen)
- Temperature unit (Temperature unit) (°C or °F)
- Alarm sound (Alarm sound) (volume of alarm sounds)
- Key sound (Key sound) (volume of key sounds)
- Display brightness (Display brightness)

LIGHTS (LIGHTS)

You can set the following from this menu:

- Ambient sensor (the lighting will be regulated automatically according to the light in the room where the appliance is placed)
- Brightness (adjust the lighting manually)

CONNECTIVITY (CONNECTIVITY)

You can set the following from this menu:

- Wi-Fi (switch On or Off)
  - App download (Application download) (QR code to download the app)
  - Connection setup (Connection setup) (after the Wi-Fi modul is activated the appliance is ready to connect to the mobile app. Follow instructions in the mobile app on how to connect)
  - Unpair all (Unpair all) (activate to disconnect all paired user profiles from the appliance connected services).

Connecting your appliance to the application **ConnectLife**

ConnectLife it is a smart home platform that connects people, devices, and services. The **ConnectLife** application includes advanced digital services and carefree solutions that allow users to monitor and control appliances, receive notifications from a smartphone, and update software (supported features vary depending on your appliance and your region/country).

To connect your smart device, you need a home Wi-Fi network (only 2.4 GHz networks are supported) and a smartphone with the application **ConnectLife**.

To download the **ConnectLife** application, scan the QR code or search for **ConnectLife** in your favorite app store.

1. Install the **ConnectLife** application and create an account.
2. In the **ConnectLife** application, go to the "Add device" menu and select the appropriate type of device. Then scan the QR code (it can be found on the rating plate of the appliance; you can also enter the AUID/SN code manually).
3. The application then guides you through the entire process of connecting the appliance to your smartphone.
4. After a successful connection, the appliance can be operated remotely via the mobile application.

Do you have more questions? Visit us at **www.connectlife.io** or contact us at **hello@connectlife.io**.

SYSTEM (SYSTEM)

You can set the following from this menu:

- Appliance info (Appliance info)
- Software update (Software update) - The appliance software can be updated (for example improved function updates or safety-related updates). For such an update, the appliance must be connected to the cloud.

> **INFORMATION!**
>
> With the software update also user interface can change, so user manuals may not reflect the latest changes. For latest version of the user manuals please check your **ConnectLife** application.

- Demo mode (Demo mode) (Use this mode for showroom environment only.)
- Reset to default (Reset to default) (All settings will be set to default values.)
- Factory reset (Factory reset) (Restore factory default settings.)

Alarms

Please refer also to chapter "Tips & Tricks" to learn more about possible reasons for each particular alarm.

All alarms will be displayed using the **alarm pop-up.**

Temperature alarm

If the temperature inside the appliance is too high, an acoustic alarm will be activated (intermittent tone) and the display will show **a pop-up window** with the information that the temperature is too high. The pop-up remains on the screen until you press ✓ .

INFORMATION!

Every time you switch on the appliance, there is a 24-hour delay in alarm operation. If the appropriate temperature is not reached within this period, the alarm will be activated.

Stopping the alarm:

By pressing ✓ , the alarm will stop and the pop-up will disappear.

Setpoint temperature continues to blink while the temperature is still out of range.

Open door alarm

Door alarm sounds and **alarm pop-up** is triggered when the door is open for more than 3 minutes and there is no user interaction.

Short press on 'X' key will stop alarm from sounding and **alarm pop-up** will be canceled. If you do not close the door, the alarm will switch on again after 5 minutes.

Closing the door will stop the alarm.

Power outage high temperature alarm

If the temperature in the appliance reaches the alarm level during a power failure, then the high temperature alarm will be activated once power supply is restored.

The alarm sounds and the following **message appears** "Power failure has occurred.".

Stopping the alarm:

By pressing ✓ you remove **the pop-up window** with the message and cancel **the over-temperature alarm due to power outage**.

INFORMATION!

When **Power outage high temperature** alarm is canceled, **Temperature alarm** can be still active. In that case, alarm behaves like **Temperature alarm.**

Avoid contamination of food

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

Freezing and storing foods in the freezer

Important recommendations for freezing fresh food

- The maximum quantity of food that you can put in the freezer in one go is stated on the type plate. Putting more than this maximum quantity of food into the freezer will slow the freezing process and reduce the quality. Moreover, this will also harm the quality of frozen food already stored in the freezer.
- Use only good-quality fresh food that is suitable for freezing.
- Allow hot food to cool to room temperature.
- Food needs to be frozen quickly. It is recommended that you use small packs.
- Use air and watertight packaging to prevent the food from drying out and lose its vitamins.
- Note the type and quantity of the food on the packaging, together with the date on which it was frozen.
- Do not allow fresh food to come into contact with frozen food.
- You can remove all the drawers to make use of the total volume of the freezer compartment.
- Put the food directly on a shelf and on the base of the freezer.

Freezing large quantities of fresh food

- Activate the intensive freezing function 24 hours before you plan to freeze the food.
- Distribute the fresh food equally between all the drawers in the freezer compartment.
- After 24 hours, you can transfer the food to another compartment in the freezer and then freeze a new batch of food.

Important recommendations for storing frozen food

- Follow the manufacturer's instructions for the storage and use of frozen food. Take note of the recommended storage temperature and use-by date stated on the packaging.
- Use only food in undamaged packaging that has been stored at a temperature of -18 °C or lower.
- Do not buy food covered in frost. This indicates that the food has thawed or partially thawed several times and, as a result, is of inferior quality.
- Make sure that the food does not thaw during transport. An increase in its temperature will shorten the storage life and harm the quality of the food.

Recommended storage times of frozen food in the freezer ****

Type of food	Storage life
Fruit, beef	10 to 12 months
Vegetables, veal, poultry	8 to 10 months
Venison	6 to 8 months
Pork	4 to 6 months
Finely chopped or minced meat	4 months
Bread, pastas, cooked dishes, whitefish	3 months
Offal	2 months
Smoked sausage, bluefish	1 month

Thawing frozen food

- Thawing is an important step in storing food preserved by freezing. Food must be thawed in the correct way.
- Suitable methods of thawing food are:
  - in the refrigerator;
  - in cold water;
  - in a microwave or conventional oven with a suitable thaw program.
- Some frozen products can be prepared without needing to thaw them first. The manufacturer will state this on the packaging.
- The food needs to be packed in small portions. In this way the food thaws faster.
- Use partially or completely thawed food as quickly as possible. The bacteria in thawed food are reactivated and the food will spoil rapidly. This applies in particular to fruit, vegetables and ready-made food.
- Do not refreeze partially or completely thawed food.

Defrosting the appliance

The modern Total NoFrost technology in the freezer compartment prevents the formation of ice and the accumulation of frost on foods, thus enabling economical operation, greater transparency and full use of space.

With the NoFrost system, you no longer need to defrost the freezer.

Cleaning the appliance

⚠ WARNING!

Switch off the appliance and remove the plug from the socket before you start cleaning it.

⚠ WARNING!

Do not use abrasive cleaning agents, as they can damage the surface.

- Regularly clean the interior of the appliance with lukewarm water. If so required, add a neutral cleaning agent or special refrigerator cleaner to the water. Clean all surfaces with a soft cloth. Wipe the cleaned parts with a cloth with clean water and then dry them thoroughly.
- Do not put parts of the appliance in a dishwasher: this could damage them.

⚠ WARNING!

When you are not going to use the appliance for a longer period then switch it off with the appropriate key and disconnect it from the mains. Empty, defrost and clean the appliance, and leave the door ajar.

Faults table

When you have any doubts about whether your appliance is working properly you should not immediately assume that it is defective. We recommend that you should in any case check the points in the following table.

Problem	Cause/Solution
Appliance is connected to the power mains but it does not work.	• Make sure there is voltage in the power outlet and that the appliance is switched on.
Appliance cools continuously for a long time.	The compressor is operating for a longer time at low capacity (low energy consumption / high efficiency). This is the most efficient form of operation. The following factors can also influence the appliance's operation: • The ambient temperature is too high. • The door has been opened for too long or too frequently. • The door is not properly closed. • The door does not seal properly (the seal is dirty, the door is misaligned or the seal is damaged, etc.). • Too much fresh food has been put in at the same time. • Insufficient air circulation around the compressor and condenser. Check that the ventilation around the appliance is sufficient (see the separate installation instructions). • The sensor in the refrigerator is blocked by fresh food. Make sure that air can circulate freely around the sensor (not applicable to all models).
Excessive ice formation in the freezer.	• The door has been opened for too long or too frequently. • The door is not properly closed. • The door does not seal properly (the seal is dirty, the door is misaligned or the seal is damaged, etc.).
Alarm key and/or temperature display flashing.	• The door has been opened for too long or too frequently. • The door does not seal properly (the seal is dirty, the door is misaligned or the seal is damaged, etc.). • Too much fresh food has been put in at the same time.
Door does not open easily.	You are trying to open the appliance's door just after you have closed the door. Then opening the door is difficult. When you open the door, cold air escapes from the appliance and is replaced by warm air from the surroundings. As this air cools a slight vacuum is created that makes it more difficult to open the door. The situation returns to normal after a few minutes, and the door opens easily again.
Some or all of the LED lighting does not work.	• Consult a service technician about LED lighting that is not working. You may not try to repair LED lighting. • This product contains a light source of energy efficiency class G.

Table continued from last page

Problem	Cause/Solution
Appliance makes a noise.	• The appliance is cooled by a refrigeration system with a compressor (and with some models, also a fan) that makes a noise. The noise level depends on the installation of the appliance, its correct use and its age. • When you connect the appliance to the power supply the noise made by the compressor or flowing refrigerant may be slightly louder. This is not indicative of a defect, and has no effect on the service life of the appliance. The appliance will make less noise after a while. • The appliance may be temporarily noisier after the door has been opened for too long or too frequently, a large quantity of fresh food has been put in the appliance or the intensive freezing or intensive cooling function has been activated.
The display shows error code E0 or E8.	The touch keys do not respond. Call the service centre to make an appointment for repair work. The appliance operates in the safe mode until it has been repaired. The appliance automatically retains the most suitable temperature for each compartment.
The display shows error code E9.	The door sensor is malfunctioning. Call a service centre for repair.
The display shows error code F1.	The freezer compartment fan is malfunctioning. Call a service centre for repair. The appliance cannot operate normally. Transfer the food to a cool place and switch off the appliance.
The display shows error code F2.	The condenser fan is malfunctioning. Call a service centre to fix the problem. The appliance cannot operate normally. Transfer the food to a cool place and switch off the appliance.
The display shows error code t2.	Freezer compartment temperature sensor error or fault. Call a service centre for repair. Until the appliance is repaired by a service technician, the appliance will operate in safe mode. The appliance will automatically maintain the most suitable temperature for each compartment.
The display shows error code t4.	Ambient temperature sensor is malfunctioning. Call a service center to fix the problem. The appliance will operate in safe mode until it is repaired by a service technician. The appliance will automatically maintain the most suitable temperature for each compartment.
The display shows error code t6.	The evaporator sensor of the freezer compartment is defective. Call a service centre to fix the problem. The appliance will operate in safe mode until it is repaired by a service technician. The appliance will automatically maintain the most suitable temperature for each compartment.
The display shows error code L1.	The ambient light sensor is malfunctioning. Call a service centre for repair.
The display shows error code 81.	The WiFi module is malfunctioning. Call a service centre to fix the problem.

If you are unable to solve the problem then contact the service centre. When you do so, state the type, model and serial number shown on the type plate or label on the inside of the appliance.

Service

If you have encountered a problem that you cannot resolve, please contact your nearest service centre for professional help – details available at www.asko.com. Our website also has information about the availability of spare parts and what you can repair yourself.

You will need to provide the details stated on the serial number plate. Include the article number and the serial number.

Please note that non-professional repairs may pose a safety risk to the user and affect the warranty.

In European Union Member States and European Economic Area States, consumers have the right to choose, at their own discretion, between an authorized repairer and an independent repairer. However, where the consumer chooses an independent repairer, the seller and/or the manufacturer shall not be liable for any product safety risks or infringements of intellectual property rights resulting from interventions carried out by the independent repairer, nor shall they be responsible for any loss of guarantee or warranty rights arising from objective or legitimate reasons attributable to improperly performed repairs.

For sales contracts concluded with consumers within European Union Member States and European Economic Area States, on or after 31 July 2026, according to the Right to Repair Directive ((EU) 2024/1799), the following consumers' rights apply.

- Right to choose repair
- Extension of the legal guarantee

This information reflects the minimum level of consumer protection established by the Right to Repair Directive. EU Member States may introduce more extensive consumer rights at the national level. Where national legislation provides a higher level of protection, such national provisions shall prevail.

Additional information provided by the manufacturer is available at: www.asko.com.

Spare parts

Functional spare parts for the purchased appliance will be available for at least 15 years from the date the last unit of the model was placed on the market. During this time, original spare parts will be available to ensure the correct operation of your appliance. A list of spare parts and repair tips in accordance with the current Ecodesign Directive can be found by scanning the QR code included with the appliance. Or on the following link: https://auid.connectlife.io.

Radio equipment type:	Wi-Fi module
Operating frequency range:	2,412 GHz - 2,472 GHz
Maximum output power:	20 dBm EIRP
Maximum antenna gain:	2,7 dBi

or

Radio equipment type:	HL3215STG HLW3215-TG HLW3215-TG01
Wi-Fi	
Operating frequency range:	2,412 GHz - 2,472 GHz
Maximum output power:	≤10 dBm/MHz (EIRP) (Antenna gain 10 dBi)
Maximum antenna gain:	Gain: 0 dBi
Bluetooth	
Frequency range:	2,402 GHz - 2,480 GHz
Carrier Output:	6 dBm (≤10 dBm)
Emission type:	F1D

Declaration of conformity

The company declares that the device with the function Connectlife complies with the essential requirements and other relevant provisions of Directive 2014/53/EU. The detailed Declaration of Conformity can be found at the web address https://auid.connectlife.io on the page of your device among the additional documents.

Disposal of packaging and appliance

This appliance is made from sustainable materials. This appliance must be disposed of in a responsible manner at the end of its service life. Contact the local authorities for information about the method.

INFORMATION!

See also the chapter ‘Disposal’ in the Safety instructions.

The packaging of the appliance is recyclable. The following materials may have been used:

- Cardboard.
- Polyethylene foil (PE).
- CFC-free polystyrene (hard PS foam).

These materials must be disposed of in a responsible manner and in accordance with government regulations.



The appliance is marked with a crossed out wheeled bin symbol to draw your attention to the requirement for the separate disposal of domestic electrical appliances. This means that the appliance may not be disposed of in unsorted household waste at the end of its service life. The appliance must be taken to a special municipal waste processing location for separated waste or to a dealer who provides this service.

Collecting and disposing of domestic appliances separately avoids detrimental consequences for humans and the environment. This ensures that the materials used to make the appliance can be recovered and that substantial savings in the use of energy and raw materials can be achieved.

CE

Declaration of conformity

We hereby declare that our products conform to the applicable European Directives, Regulations and requirements, as well as all requirements in the standards to which reference is made.

ASKO

The instructions for use can also be found on our website: www.asko.com

945773-a4

CE