
ASKO
Inspired by Scandinavia



INSTRUCTIONS FOR USE
Vacuum drawer
EN

ODV61SS
ODV61BS
ODV61GS

Contents

Pictograms used **3**
Safety regulations **4**
Use **6**
Description 6
Control panel 6
Operation **7**
Before first use 7
Operation 7
Vacuuming 8
External vacuuming 9
Vacuuming failure 9
Starting Dry Run Function 10
Installation **11**
Safety 11
Install the oil filter 13
Built-in 13
Environmental aspects **15**
Disposal of the appliance and packaging 15

The following symbols are used throughout the manual, and they have the following meanings:

INFORMATION!

Information, advice, tip or recommendation

WARNING!

Warning – general danger

ELECTRIC SHOCK!

Warning – danger of electric shock

HOT SURFACE!

Warning – danger of hot surface

DANGER OF FIRE!

Warning – danger of fire

It is important that you carefully read the instructions.

⚠ WARNING!

READ CAREFULLY AND KEEP IT FOR FUTURE REFERENCE!

EU

⚠ WARNING!

This appliance and the accessible parts will become hot during use. Do not touch hot parts. Keep children younger than 8 away from the appliance unless they are under continuous supervision.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Never use a steam cleaner for cleaning the appliance. Only clean the appliance when switched off. The steam of a steam cleaner could reach the conducting parts and cause an electrical short.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- A defective appliance may cause electric shock. Never switch on a defective appliance. Disconnect it and contact customer service.
- Improper installation and maintenance work or repairs are dangerous. Do not touch any conducting connections and do not change the electrical and mechanical design of the appliance. These may only be performed by authorized and trained technicians. If the appliance has a defect, please disconnect it and contact customer service.
- Do not operate the appliance with wet hands or in contact with water.
- This appliance is intended to be used in household only.

- The appliance must not be installed behind a decorative door in order to avoid overheating.
- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.

⚠ ELECTRIC SHOCK!

WARNING: If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.


AU/NZS

⚠ WARNING!

Accessible parts may become hot during use. Young children should be kept away.


- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Description

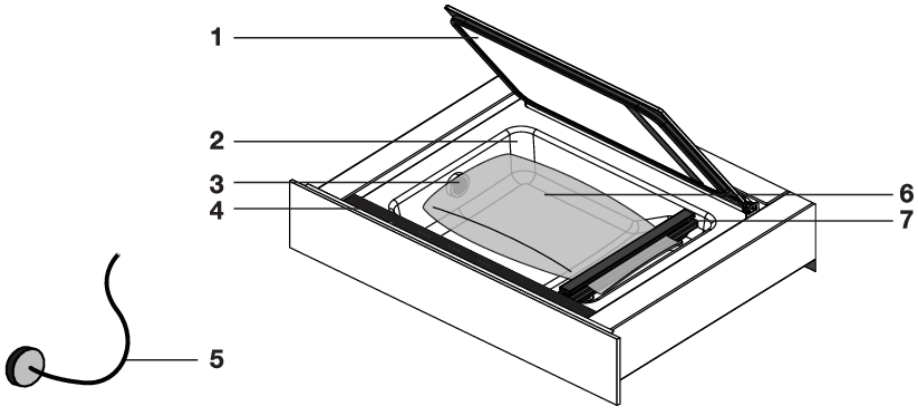

1. Lid
2. Vacuum chamber
3. Suction point
4. Control panel
5. Hose for external vacuuming
6. Vacuum sealer bag
7. Sealing strip

Control panel

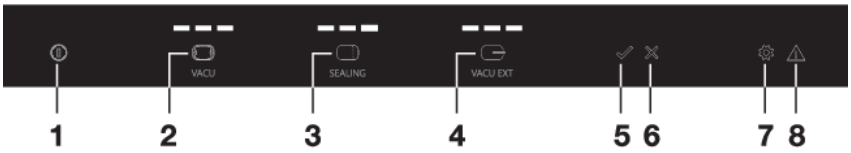


1. On/Off touch key
2. Vacuum Level touch key
3. Sealing Time touch key
4. External Vacuum Level touch key
5. Start touch key
6. Stop touch key
7. Dry Run Function touch key with indicator
8. Vacuuming Failure indicator

Before first use

⚠ WARNING!

Make sure that during installation, the transport cover was removed, the oil filter was installed and that the appliance was mounted according to the installation instructions.

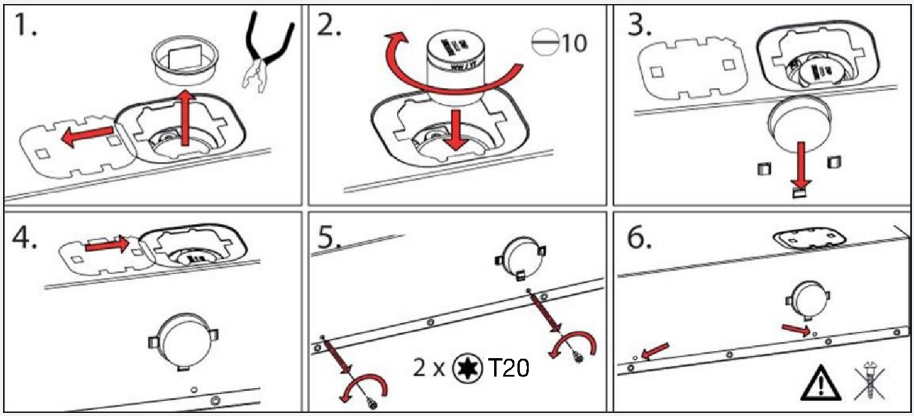

Operation

Operate the vacuum drawer with the control panel on the top of the drawer.

1. Push the drawer in somewhat and slide it out of the cupboard.
2. Switch on the drawer with the On/Off touch key. Press the On/Off touch key until the device is switched on.
3. Open the lid and place a vacuum sealer bag in the vacuum chamber (see 'Positioning a vacuum sealer bag').
4. Close the lid.
5. Set the vacuum level with the Vacuum Level touch key (see 'Vacuuming').
   - *The 3 indicator lights display the vacuum level.*
   - *The lights flash and diminish during vacuuming.*
6. Set the vacuum closure time (sealing time) with the 'Sealing Time' touch key (see 'Vacuuming').
   - *The 3 indicator lights display the sealing time.*
   - *The lights flash and diminish during sealing.*
7. Press the Start touch key to start the vacuuming process.
8. **Immediately afterwards, shortly press on the front of the lid so that the vacuum chamber can vacuum.**


NOTE!

Vacuuming only works if the lid on the front is quickly pushed into the rubber gasket!

- Vacuuming stops automatically if the vacuum sealer bag has been vacuumed and sealed.
- Orange indicator lights and orange lighted keys mean that a function is active.
- White indicator lights display the chosen setting and white lighted keys may be operated.

Vacuuming

Positioning a vacuum sealer bag

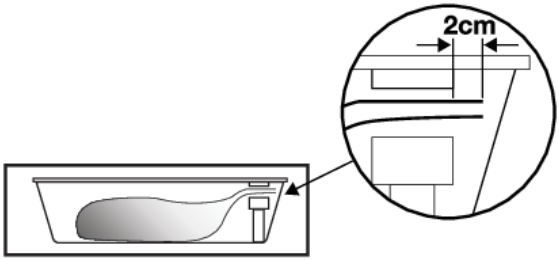

1. Open the lid and place the vacuum sealer bag with the food in the vacuum chamber.
2. Place the opening of the bag at least 2 cm outside the sealing strip.

⚠ WARNING!

The bag may not cover the suction point in the vacuum chamber!

Vacuuming

Press the Vacuum Level touch key a number of times to select a vacuum level. The white indicator lights display the level.

Select from 3 vacuum levels:


▹ Low: for delicate products (bread, soft fruit/vegetables)

▹ Middle: for soft products (liquids, fish, prepared products)

▹ High: for firm products (firm vegetables, meat, dry products)

Press the Sealing Time touch key a number of times to select a closure time (sealing time). Select from 3 sealing times. The proper sealing time depends on the thickness of the vacuum sealer bag. The white indicator lights display the level.

Select from 3 sealing times:

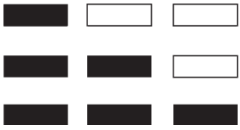

▷ Thin vacuum sealer bags

▷ Medium vacuum sealer bags

▷ Thick vacuum sealer bags

External vacuuming

1. Press the On/Off touch key until the device is switched on.
2. Use the included hose to connect the external vacuuming accessory with the connection point in the vacuum chamber.
3. Use the External Vacuum Level touch key to select a low, middle or high level.
4. Press the Start touch key to start the vacuuming process. Vacuuming stops automatically when the vacuum level has been reached.

⚠ WARNING!

Fittings to connect external vacuuming accessories to the hose for use in external vacuuming are not included with the vacuum drawer. These are dependent on the type of vacuuming accessory.

Vacuuming failure



If the vacuum drawer cannot vacuum the vacuum chamber, this can be caused by the following issues:

- The lid is not or insufficiently pushed in when starting vacuuming.
  - *The Vacuuming Failure indicator lights up. Push the lid on the front into the rubber gasket properly.*
- The oil of the vacuum pump necessary for vacuuming contains moisture.
  - *The Vacuuming Failure indicator and the Dry Run Function indicator light up.*
  - *Start the Dry Run Function.*

NOTE!

If the vacuuming fails a number of times, then the Vacuuming Failure indicator and the Dry Run Function indicator light up. It is then advised to perform the Dry Run Function.

- A failure has occurred.
  - *Call a service technician.*

⚠ WARNING!

If the Vacuum Failure indicator and Dry Run Function indicator are ignored, the drawer can no longer be operated after a certain number of warnings (except the Dry Run Function). It is then necessary to start the Dry Run Function to be able to use the drawer again.

Starting Dry Run Function



After using the vacuum drawer for a period of time, there will be moisture in the oil of the vacuum pump. Because of this, the device may vacuum insufficiently. It is then advised to perform the Dry Run Function. If vacuuming does not work, then the Vacuuming Failure indicator and the Dry Run Function indicator light up. After a number of warnings (Vacuuming Failure indicator and Dry Run Function indicator lighting up), it is advised to perform the Dry Run Function.

1. Press the Dry Run Function touch key to start the Dry Run Function.
2. Immediately afterwards, shortly press on the front of the lid so that the vacuum chamber can vacuum.
    - *The Dry Run Function symbol flashes during drying.*

⚠ WARNING!

- If the Dry Run Function does not completely remove the moisture from the oil after a maximum of 20 minutes, then the drawer switches to a ‘cool off’ setting. The vacuum drawer can then not be used for a period of one hour. The Dry Run Function indicator is visible in the display. After that, start the Dry Run Function again!
- **Regular use of the Dry Run Function is part of the normal operation of the vacuum drawer.**

Safety

General

- This appliance should only be connected by a registered installer!
- The electrical connection must comply with national and local regulations.
- The wall plug socket and plug should always be accessible.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If you want to make a fixed connection, make sure that a omnipolar switch with a contact separation of at least 3 mm is fitted in the supply cable.
- If a stationary appliance is not fitted with a supply cord and a plug, or with other means for disconnection from the supply mains having a contact separation in all poles that provide full disconnection under overvoltage category III conditions, the instructions shall state that means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- WARNING: Never open the appliance casing. The casing may only be opened by a service technician.
- Prior to connecting the drawer, ensure that all cables in your home's electrical system are of sufficient diameter to supply the appliance properly.
- Complete all electrical connections before building in the appliance.
- Improper installation and maintenance work or repairs are dangerous. These may only be performed by authorized and trained technicians. If the appliance has a defect, please disconnect it and contact customer service.
- If the appliance is mounted behind a furniture front (e.g. a door), never close it while the appliance is in use. Heat and humidity accumulate behind a closed furniture front. This may damage drawer, cupboard and floor.

- Only use original replacement parts. These meet the required safety specifications.
- Please note that the appliance must not be mounted tilted or upended. The design of the appliance includes an oil-containing pump. Please refer to the installation instructions.
- **If the safety instructions and warnings are not followed, the manufacturer cannot be held responsible for any resulting damage.**


Connection
Electrical connection

- This appliance is manufactured in Class I; this means the device must be grounded.
- Check whether the power of the electrical mains corresponds to the power on the identification plate on the appliance.
- Before connecting to the electrical mains, check whether the power socket is grounded.
- The device is equipped with a plug. When installing the appliance, remember that this plug must remain accessible.

⚠ WARNING!


If you want to make a fixed connection, ensure that an omnipolar switch with a contact separation of at least 3 mm is fitted in the supply line.

Install the oil filter

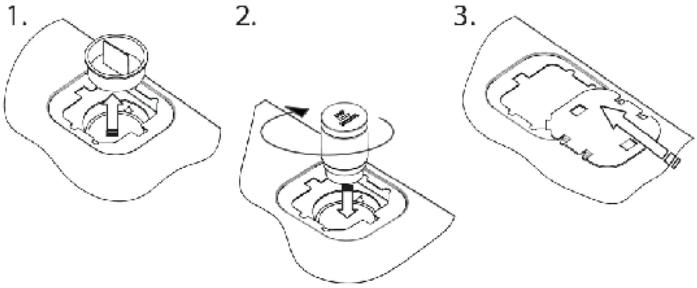



1. Remove the transport cover.
2. Install the oil filter.

Built-in

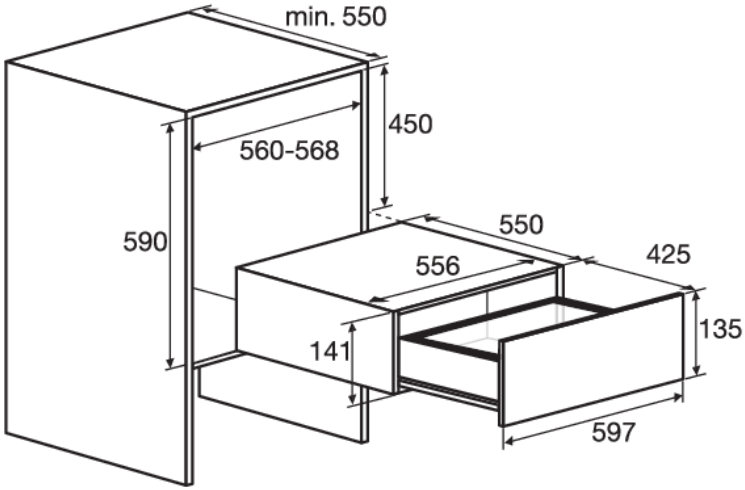

1. Put the plug of the device in a grounded wall socket.
2. Slide the appliance in the kitchen cupboard aperture. Check whether the casing fits correctly.
3. Screw the drawer securely to the cupboard at the left and right front using the 4 screws supplied.
4. Slide the decorative strips over the draw profiles on the left and right, starting from the top (ODW8128G/ODW8328G only).

Installation

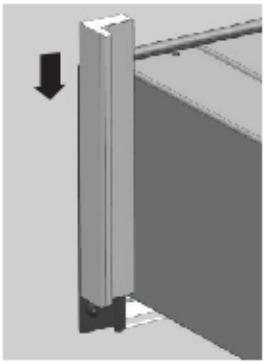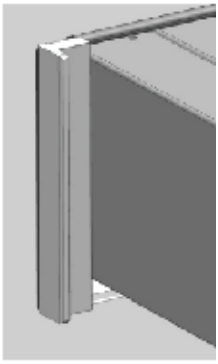⚠ WARNING!

When sliding out the drawer, it can tip forward if it is not securely screwed to the kitchen cupboard.


Disposal of the appliance and packaging

Sustainable materials have been used during the manufacture of this appliance. This appliance must be disposed of responsibly at the end of its service life. Ask your local authorities for more information about how to do this.

The appliance packaging is recyclable. The following may have been used:

- cardboard;
- polyethylene film (PE);
- CFC-free polystyrene (PS rigid foam).

Dispose of these materials in a responsible manner and in accordance with government regulations.

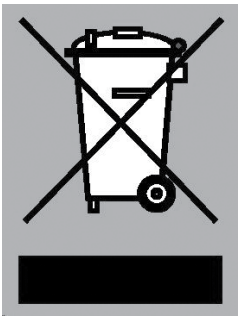

The product has been marked with a crossed-out dustbin symbol to remind you of the obligation to dispose of electrical household appliances separately. This means that the appliance may not be included with normal domestic refuse at the end of its service life. The appliance must be taken to a special municipal centre for separated waste collection or to a dealer providing this service.

A separate collection of household appliances helps to prevent any potential negative impact on the environment and on human health caused by improper disposal. It ensures that the materials of which the appliance is composed can be recovered to obtain significant savings in energy and raw materials.

NOTE!

Please note! Do not throw a broken ceramic glass plate in the glass recycling bin but take this to the Municipality's waste recycling centre.

CE

Declaration of conformity

We hereby declare that our products satisfy the applicable European directives, orders and regulations, as well as the requirements stated in the referenced standards.

ASKO

Inspired by Scandinavia

www.asko.com

945152-a1

CE

We reserve the right to make changes.